

Tool Instructions Flaring & Re-Rounding

WARNING:

THE FOLLOWING INSTRUCTIONS MUST BE READ AND FOLLOWED AT ALL TIMES.

IMPORTANT:

ALWAYS WEAR SAFETY GOGGLES WHEN WORKING WITH THIS TOOL.

- 1. Cut copper tubing with appropriate wheel-type cutter. Be sure cut is square.
- 2. De-burr inside of cut tube (some cutters are equipped with de-burring tool).
- 3. Insert tapered end of tool into copper tubing.
- **4.** Hit the tool end with soft face brass hammer (steel hammers are not recommended), driving it into tube. Drive only to within 1/2" of flare part of tool.
- 1. Cut copper tubing with appropriate wheel-type cutter.
- 2. De-burr inside of cut tube (some cutters are equipped with de-burring tool).
- 3. Put flared tube nut onto tubing.
- 4. Grease shoulder and shank of tool (use potable grease).
- 5. Insert tapered end of tool into copper tubing.
- **6.** Drive tool into copper tube using soft face brass hammer (steel hammers are not recommended).
- 7. Rotate tool continuously and slide tube nut up to flare after each series of driving flare tool into tube.
- 8. Continue to flare tube until flare is snug inside tube nut. Tube nut should still spin freely by hand.
- 9. If tube cracks, or flare is unusable, re-cut tube and start over.

THESE ARE ONLY COMMON INSTRUCTIONS FOR RE-ROUNDING AND FLARING COPPER TUBING. THE MANUFACTURER DOES NOT GUARANTEE, AND IS NOT RESPONSIBLE FOR ANY LOSS OR DAMAGE AS A RESULT OF THESE INSTRUCTIONS.

WARNING: It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380.



Tool Instructions Flaring & Re-Rounding

WARNING:

THE FOLLOWING INSTRUCTIONS MUST BE READ AND FOLLOWED AT ALL TIMES.

IMPORTANT:

ALWAYS WEAR SAFETY GOGGLES WHEN WORKING WITH THIS TOOL.

Re-rounding

Flaring

3210-311

- $\label{eq:comparameter} \textbf{1.} \ \textbf{Cut copper tubing with appropriate wheel-type cutter}. \ \textbf{Be sure cut is square}.$
- 2. De-burr inside of cut tube (some cutters are equipped with de-burring tool).
- 3. Insert tapered end of tool into copper tubing.
- **4.** Hit the tool end with soft face brass hammer (steel hammers are not recommended), driving it into tube. Drive only to within 1/2" of flare part of tool.
- 1. Cut copper tubing with appropriate wheel-type cutter.
- 2. De-burr inside of cut tube (some cutters are equipped with de-burring tool).
- 3. Put flared tube nut onto tubing.
- 4. Grease shoulder and shank of tool (use potable grease).
- 5. Insert tapered end of tool into copper tubing.
- **6.** Drive tool into copper tube using soft face brass hammer (steel hammers are not recommended).
- 7. Rotate tool continuously and slide tube nut up to flare after each series of driving flare tool into tube.
- 8. Continue to flare tube until flare is snug inside tube nut. Tube nut should still spin freely by hand.
- 9. If tube cracks, or flare is unusable, re-cut tube and start over.

THESE ARE ONLY COMMON INSTRUCTIONS FOR RE-ROUNDING AND FLARING COPPER TUBING. THE MANUFACTURER DOES NOT GUARANTEE, AND IS NOT RESPONSIBLE FOR ANY LOSS OR DAMAGE AS A RESULT OF THESE INSTRUCTIONS.

WARNING: It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380.