




# Installation Instructions Angle Single Check Backflow Preventers/Device

## COMPONENTS & REPAIR PARTS

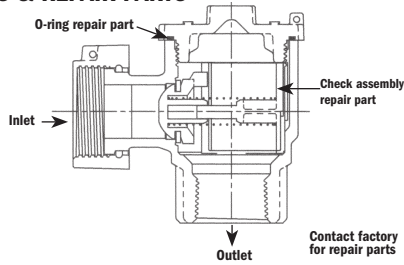

### 702 Series - Model Number Explanation

#### SPACE 1, 2, & 3

Basic Single Check Valve  
Model Number:  
702 = Angle valve

#### SPACE 4

(-) Standard  
W = Pentagon test plug in cap

#### SPACE 5

Single Check Valve Size:  
3 = 3/4", 4 = 1"

#### SPACE 6

Inlet Connection Type:  
H - Meter Swivel Integral w/Saddle  
J - Meter Swivel Integral  
Y - Yoke style thread male integral

#### SPACE 7

Outlet Connection Type:  
E - Female iron pipe integral

#### SPACE 8

Blank

#### SPACE 9

Thread Size of Meter Swivel Nut

METER SIZE	THREAD SIZE	METER DESIGNATION
5/8"	3/4"	3
5/8" X 3/4"	1"	4
3/4"	1"	4
1"	1 1/4"	5

For Iron Yokes use the following designation

METER SIZE	THREAD SIZE	METER DESIGNATION
5/8"	-	2
5/8" X 3/4"	-	3
3/4"	-	3
1"	-	4

#### SPACE 10

Sizes for Outlet Connections:  
3/4" = 3, 1" = 4

### HOW TO ORDER

Not all sizes or combinations available - contact factory.

UNIT REQUIRED (Example):

- Angle style valve
- Inlet - Meter swivel integral (5/8 x 3/4 meter)
- Valve size 3/4"
- Outlet - FNPT integral 3/4"
- No test valve

### Order Model 702-3HE 43


SPACE 1, 2, & 3	SPACE 4	SPACE 5	SPACE 6	SPACE 7	SPACE 8	SPACE 9	SPACE 10
702	-	3	H	E		4	3

(Installation and test procedures on opposite side)



# Installation Instructions Angle Single Check Backflow Preventers/Device

## COMPONENTS & REPAIR PARTS

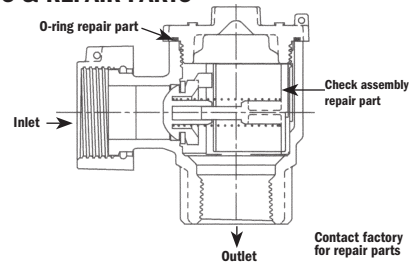

### 702 Series - Model Number Explanation

#### SPACE 1, 2, & 3

Basic Single Check Valve  
Model Number:  
702 = Angle valve

#### SPACE 4

(-) Standard  
W = Pentagon test plug in cap

#### SPACE 5

Single Check Valve Size:  
3 = 3/4", 4 = 1"

#### SPACE 6

Inlet Connection Type:  
H - Meter Swivel Integral w/Saddle  
J - Meter Swivel Integral  
Y - Yoke style thread male integral

#### SPACE 7

Outlet Connection Type:  
E - Female iron pipe integral

#### SPACE 8

Blank

#### SPACE 9

Thread Size of Meter Swivel Nut

METER SIZE	THREAD SIZE	METER DESIGNATION
5/8"	3/4"	3
5/8" X 3/4"	1"	4
3/4"	1"	4
1"	1 1/4"	5

For Iron Yokes use the following designation

METER SIZE	THREAD SIZE	METER DESIGNATION
5/8"	-	2
5/8" X 3/4"	-	3
3/4"	-	3
1"	-	4

#### SPACE 10

Sizes for Outlet Connections:  
3/4" = 3, 1" = 4

### HOW TO ORDER

Not all sizes or combinations available - contact factory.

UNIT REQUIRED (Example):

- Angle style valve
- Inlet - Meter swivel integral (5/8 x 3/4 meter)
- Valve size 3/4"
- Outlet - FNPT integral 3/4"
- No test valve

### Order Model 702-3HE 43


SPACE 1, 2, & 3	SPACE 4	SPACE 5	SPACE 6	SPACE 7	SPACE 8	SPACE 9	SPACE 10
702	-	3	H	E		4	3

(Installation and test procedures on opposite side)



# Installation Instructions Angle Single Check Backflow Preventers/Device

## COMPONENTS & REPAIR PARTS

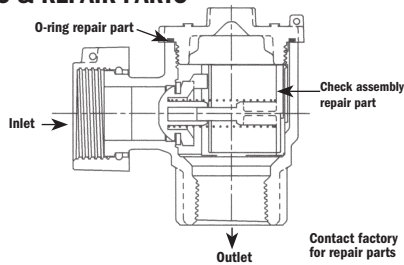

### 702 Series - Model Number Explanation

#### SPACE 1, 2, & 3

Basic Single Check Valve  
Model Number:  
702 = Angle valve

#### SPACE 4

(-) Standard  
W = Pentagon test plug in cap

#### SPACE 5

Single Check Valve Size:  
3 = 3/4", 4 = 1"

#### SPACE 6

Inlet Connection Type:  
H - Meter Swivel Integral w/Saddle  
J - Meter Swivel Integral  
Y - Yoke style thread male integral

#### SPACE 7

Outlet Connection Type:  
E - Female iron pipe integral

#### SPACE 8

Blank

#### SPACE 9

Thread Size of Meter Swivel Nut

METER SIZE	THREAD SIZE	METER DESIGNATION
5/8"	3/4"	3
5/8" X 3/4"	1"	4
3/4"	1"	4
1"	1 1/4"	5

For Iron Yokes use the following designation

METER SIZE	THREAD SIZE	METER DESIGNATION
5/8"	-	2
5/8" X 3/4"	-	3
3/4"	-	3
1"	-	4

#### SPACE 10

Sizes for Outlet Connections:  
3/4" = 3, 1" = 4

### HOW TO ORDER

Not all sizes or combinations available - contact factory.

UNIT REQUIRED (Example):

- Angle style valve
- Inlet - Meter swivel integral (5/8 x 3/4 meter)
- Valve size 3/4"
- Outlet - FNPT integral 3/4"
- No test valve

### Order Model 702-3HE 43


SPACE 1, 2, & 3	SPACE 4	SPACE 5	SPACE 6	SPACE 7	SPACE 8	SPACE 9	SPACE 10
702	-	3	H	E		4	3

(Installation and test procedures on opposite side)



# Installation Instructions Angle Single Check Backflow Preventers/Device

## COMPONENTS & REPAIR PARTS

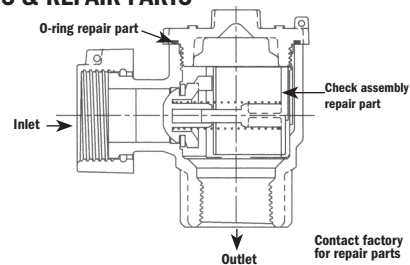

### 702 Series - Model Number Explanation

#### SPACE 1, 2, & 3

Basic Single Check Valve  
Model Number:  
702 = Angle valve

#### SPACE 4

(-) Standard  
W = Pentagon test plug in cap

#### SPACE 5

Single Check Valve Size:  
3 = 3/4", 4 = 1"

#### SPACE 6

Inlet Connection Type:  
H - Meter Swivel Integral w/Saddle  
J - Meter Swivel Integral  
Y - Yoke style thread male integral

#### SPACE 7

Outlet Connection Type:  
E - Female iron pipe integral

#### SPACE 8

Blank

#### SPACE 9

Thread Size of Meter Swivel Nut

METER SIZE	THREAD SIZE	METER DESIGNATION
5/8"	3/4"	3
5/8" X 3/4"	1"	4
3/4"	1"	4
1"	1 1/4"	5

For Iron Yokes use the following designation

METER SIZE	THREAD SIZE	METER DESIGNATION
5/8"	-	2
5/8" X 3/4"	-	3
3/4"	-	3
1"	-	4

#### SPACE 10

Sizes for Outlet Connections:  
3/4" = 3, 1" = 4

### HOW TO ORDER

Not all sizes or combinations available - contact factory.

UNIT REQUIRED (Example):

- Angle style valve
- Inlet - Meter swivel integral (5/8 x 3/4 meter)
- Valve size 3/4"
- Outlet - FNPT integral 3/4"
- No test valve

### Order Model 702-3HE 43

SPACE 1, 2, & 3	SPACE 4	SPACE 5	SPACE 6	SPACE 7	SPACE 8	SPACE 9	SPACE 10
702	-	3	H	E		4	3

(Installation and test procedures on opposite side)



# Installation Instructions Angle Single Check Backflow Preventers/Device

1. Use only for residential and mobile home supply service or individual outlets.
2. The device can be installed in any position.
3. The device shall be installed in an accessible location to facilitate the removal for servicing and testing.
4. Service lines should be thoroughly flushed before installing the device. Excessive pipe sealant or Teflon tape may foul check. A suitable strainer should be installed upstream of the device.
5. DO NOT use Vaseline®, plumber's grease, or any other petroleum based product on seals or O-rings.
6. Insure that device is installed in proper flow direction. Refer to flow direction arrow on body.
7. Do not over-tighten O-ring cap seal or across body cylinder to avoid distortion.
8. Any sweat fittings must be completed before installing device.
9. A pressure relief valve or expansion tank is recommended downstream of device if thermal expansion conditions are possible.
10. Use only on cold water services. Protect from freezing.
11. This device is not recommended for pressures exceeding 175 PSI.

## Field Inspection & Test Procedure

### A. DIS-ASSEMBLY


1. Remove the device cap.
2. Remove the check assembly using care not to damage device components.
3. Visually inspect seals, sealing surfaces, etc. for debris or damage.

### B. TESTING

1. Insert top check assembly into A.Y. McDONALD angle test kit as shown in drawing.
2. Add water to test kit level to upper red line - 42 inches (1.5 psig).
3. Observe water level for up to 5 minutes until water level stabilizes. Water level should not fall below lower red line - 28 inches (1.0 psig).
4. If water column falls below 28 inches the check assembly should be cleaned and re-tested or replaced.

### C. RE-ASSEMBLY

1. Clean and inspect device components.
2. Insert check assembly into body correctly corresponding to flow direction on the device body.
3. Re-assemble device cap. Do not over-tighten.

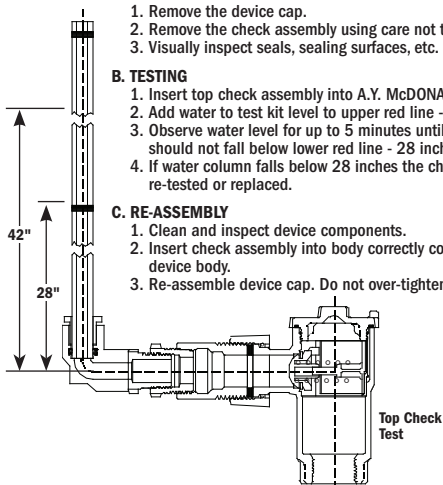

Contact factory  
for test kit

**WARNING:** It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380.

3210-339

800.292.2737 | sales@aymcdonald.com | aymcdonald.com

3/22



# Installation Instructions Angle Single Check Backflow Preventers/Device

1. Use only for residential and mobile home supply service or individual outlets.
2. The device can be installed in any position.
3. The device shall be installed in an accessible location to facilitate the removal for servicing and testing.
4. Service lines should be thoroughly flushed before installing the device. Excessive pipe sealant or Teflon tape may foul check. A suitable strainer should be installed upstream of the device.
5. DO NOT use Vaseline®, plumber's grease, or any other petroleum based product on seals or O-rings.
6. Insure that device is installed in proper flow direction. Refer to flow direction arrow on body.
7. Do not over-tighten O-ring cap seal or across body cylinder to avoid distortion.
8. Any sweat fittings must be completed before installing device.
9. A pressure relief valve or expansion tank is recommended downstream of device if thermal expansion conditions are possible.
10. Use only on cold water services. Protect from freezing.
11. This device is not recommended for pressures exceeding 175 PSI.

## Field Inspection & Test Procedure

### A. DIS-ASSEMBLY


1. Remove the device cap.
2. Remove the check assembly using care not to damage device components.
3. Visually inspect seals, sealing surfaces, etc. for debris or damage.

### B. TESTING

1. Insert top check assembly into A.Y. McDONALD angle test kit as shown in drawing.
2. Add water to test kit level to upper red line - 42 inches (1.5 psig).
3. Observe water level for up to 5 minutes until water level stabilizes. Water level should not fall below lower red line - 28 inches (1.0 psig).
4. If water column falls below 28 inches the check assembly should be cleaned and re-tested or replaced.

### C. RE-ASSEMBLY

1. Clean and inspect device components.
2. Insert check assembly into body correctly corresponding to flow direction on the device body.
3. Re-assemble device cap. Do not over-tighten.

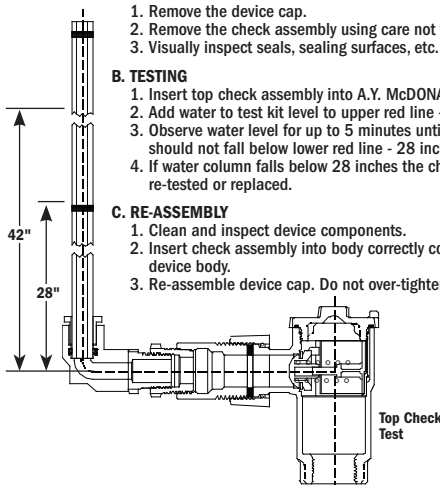

Contact factory  
for test kit

**WARNING:** It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380.

3210-339

800.292.2737 | sales@aymcdonald.com | aymcdonald.com

3/22



# Installation Instructions Angle Single Check Backflow Preventers/Device

1. Use only for residential and mobile home supply service or individual outlets.
2. The device can be installed in any position.
3. The device shall be installed in an accessible location to facilitate the removal for servicing and testing.
4. Service lines should be thoroughly flushed before installing the device. Excessive pipe sealant or Teflon tape may foul check. A suitable strainer should be installed upstream of the device.
5. DO NOT use Vaseline®, plumber's grease, or any other petroleum based product on seals or O-rings.
6. Insure that device is installed in proper flow direction. Refer to flow direction arrow on body.
7. Do not over-tighten O-ring cap seal or across body cylinder to avoid distortion.
8. Any sweat fittings must be completed before installing device.
9. A pressure relief valve or expansion tank is recommended downstream of device if thermal expansion conditions are possible.
10. Use only on cold water services. Protect from freezing.
11. This device is not recommended for pressures exceeding 175 PSI.

## Field Inspection & Test Procedure

### A. DIS-ASSEMBLY


1. Remove the device cap.
2. Remove the check assembly using care not to damage device components.
3. Visually inspect seals, sealing surfaces, etc. for debris or damage.

### B. TESTING

1. Insert top check assembly into A.Y. McDONALD angle test kit as shown in drawing.
2. Add water to test kit level to upper red line - 42 inches (1.5 psig).
3. Observe water level for up to 5 minutes until water level stabilizes. Water level should not fall below lower red line - 28 inches (1.0 psig).
4. If water column falls below 28 inches the check assembly should be cleaned and re-tested or replaced.

### C. RE-ASSEMBLY

1. Clean and inspect device components.
2. Insert check assembly into body correctly corresponding to flow direction on the device body.
3. Re-assemble device cap. Do not over-tighten.

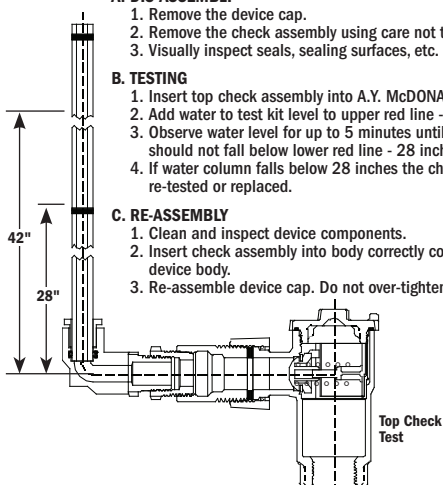

Contact factory  
for test kit

**WARNING:** It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380.

3210-339

800.292.2737 | sales@aymcdonald.com | aymcdonald.com

3/22



# Installation Instructions Angle Single Check Backflow Preventers/Device

1. Use only for residential and mobile home supply service or individual outlets.
2. The device can be installed in any position.
3. The device shall be installed in an accessible location to facilitate the removal for servicing and testing.
4. Service lines should be thoroughly flushed before installing the device. Excessive pipe sealant or Teflon tape may foul check. A suitable strainer should be installed upstream of the device.
5. DO NOT use Vaseline®, plumber's grease, or any other petroleum based product on seals or O-rings.
6. Insure that device is installed in proper flow direction. Refer to flow direction arrow on body.
7. Do not over-tighten O-ring cap seal or across body cylinder to avoid distortion.
8. Any sweat fittings must be completed before installing device.
9. A pressure relief valve or expansion tank is recommended downstream of device if thermal expansion conditions are possible.
10. Use only on cold water services. Protect from freezing.
11. This device is not recommended for pressures exceeding 175 PSI.

## Field Inspection & Test Procedure

### A. DIS-ASSEMBLY


1. Remove the device cap.
2. Remove the check assembly using care not to damage device components.
3. Visually inspect seals, sealing surfaces, etc. for debris or damage.

### B. TESTING

1. Insert top check assembly into A.Y. McDONALD angle test kit as shown in drawing.
2. Add water to test kit level to upper red line - 42 inches (1.5 psig).
3. Observe water level for up to 5 minutes until water level stabilizes. Water level should not fall below lower red line - 28 inches (1.0 psig).
4. If water column falls below 28 inches the check assembly should be cleaned and re-tested or replaced.

### C. RE-ASSEMBLY

1. Clean and inspect device components.
2. Insert check assembly into body correctly corresponding to flow direction on the device body.
3. Re-assemble device cap. Do not over-tighten.

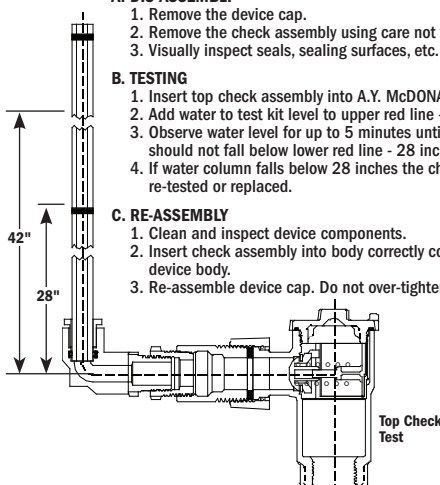

Contact factory  
for test kit

**WARNING:** It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380.

3210-339

800.292.2737 | sales@aymcdonald.com | aymcdonald.com

3/22